

Operating instructions	Winding the watch (position 2)
Position 1 Position 2 Position 3 Position 4	• Unscrew the crown by rotating it counterclockwise until the crown moves away from the case. The crown will move into position 2. This is the winding position.
	• Rotate the crown clockwise to wind the watch. After 20 to 30 seconds the watch will be fully wound.
	Setting the date (position 3 & 4)
Important information : Your watch has a self-winding movement and a screw down crown. To maintain proper working order, the crown must be screwed down to position 1 during normal wear. The watch is also water resistant. In order to be in compliance with	 Unscrew the crown placing it into position
	• Pull into position 3 (1 click). Rotate the crown clockwise until the date shows one day earlier than the day you want to set.
the warranty, the crown must also be screwed down while exposing the watch to water.	• Pull crown into position 4 (1 more click; 2 clicks total).
Setting the date (position 3 & 4) (continued)	Caring for your watch
 Rotate the crown so the hands move clockwise until the correct date shows. Then set the watch hands to the proper time. Turn the watch hands past 12 once if you are setting the watch for PM time. 	With proper maintenance, the automatic movement in your watch is made to provide a lifetime of accurate and reliable service. Boschett Timepieces recommends the watch be serviced every three to five years. Even though the watch is water resistant, it is not recommended that you wear the watch in a
• Return the crown to position 1, making sure to completely screw down the crown.	hot shower, sauna or hot tub. When wearing your watch, especially in the water, be sure
Setting the time (position 4)	the crown is fully screwed down.
• Unscrew the crown placing it into position 2	Twelve-month limited warranty Your BOSCHETT watch is warranted by
• Pull into position 4 (2 clicks).	BOSCHETT TIMEPIECES, LLC for a period of twelve (12) months from the date of purchase
• Rotate the crown to set the watch hands to the proper time.	under the terms and conditions of this warranty. This warranty covers defects in materials or workmanship existing at the time of purchase.
• Return the crown to position 1, making sure to completely screw down the crown.	See warranty document for full details. www.boschett-timepieces.com/warranty